

Defrost Installation

You will need:

- A knife.
- Wire strippers.
- Wire crimpers.

STEP 1:

Locate the pipe that is covered with foam insulation.




STEP 2:

Cut a notch out of the foam.




STEP 3:

Place the clip included with the defroster into the foam.

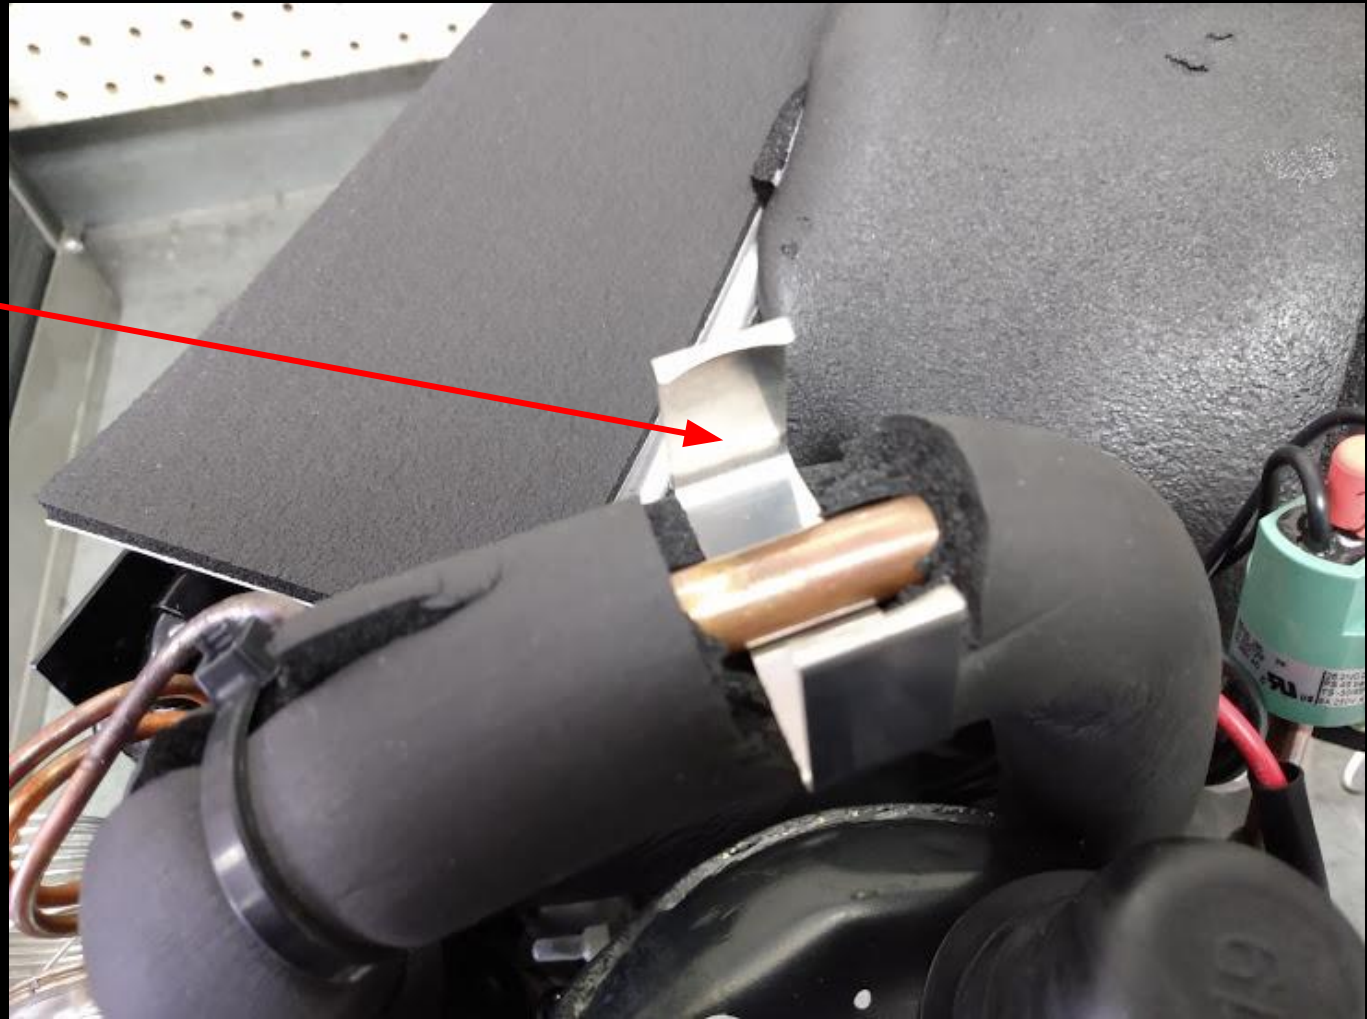


STEP 4:

Click the defroster into the clip.

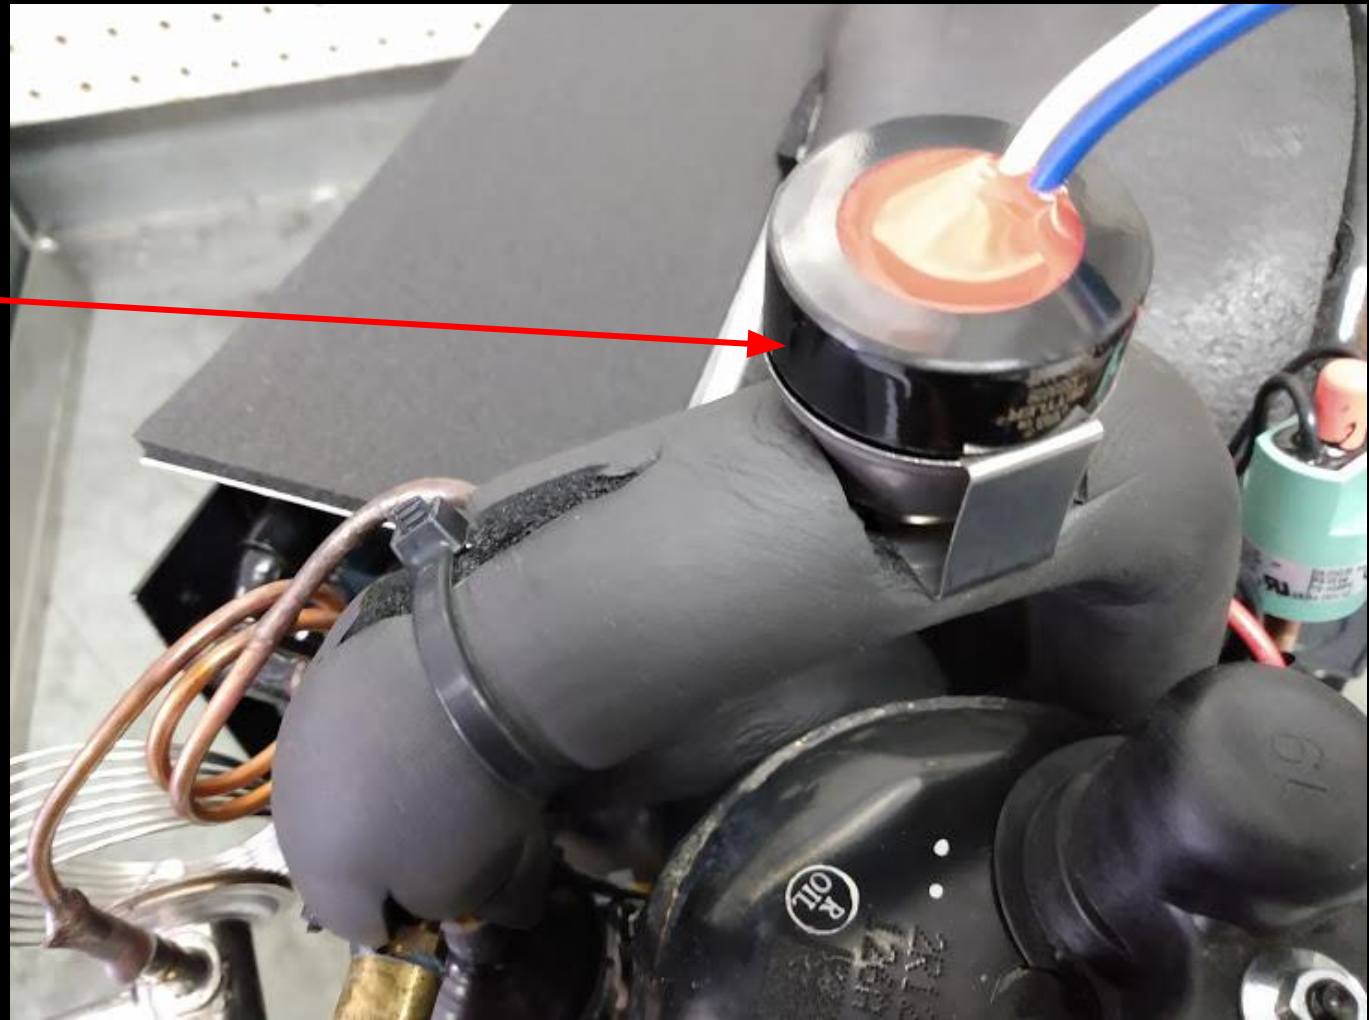


STEP 5:

Secure it into place with the tie strap.

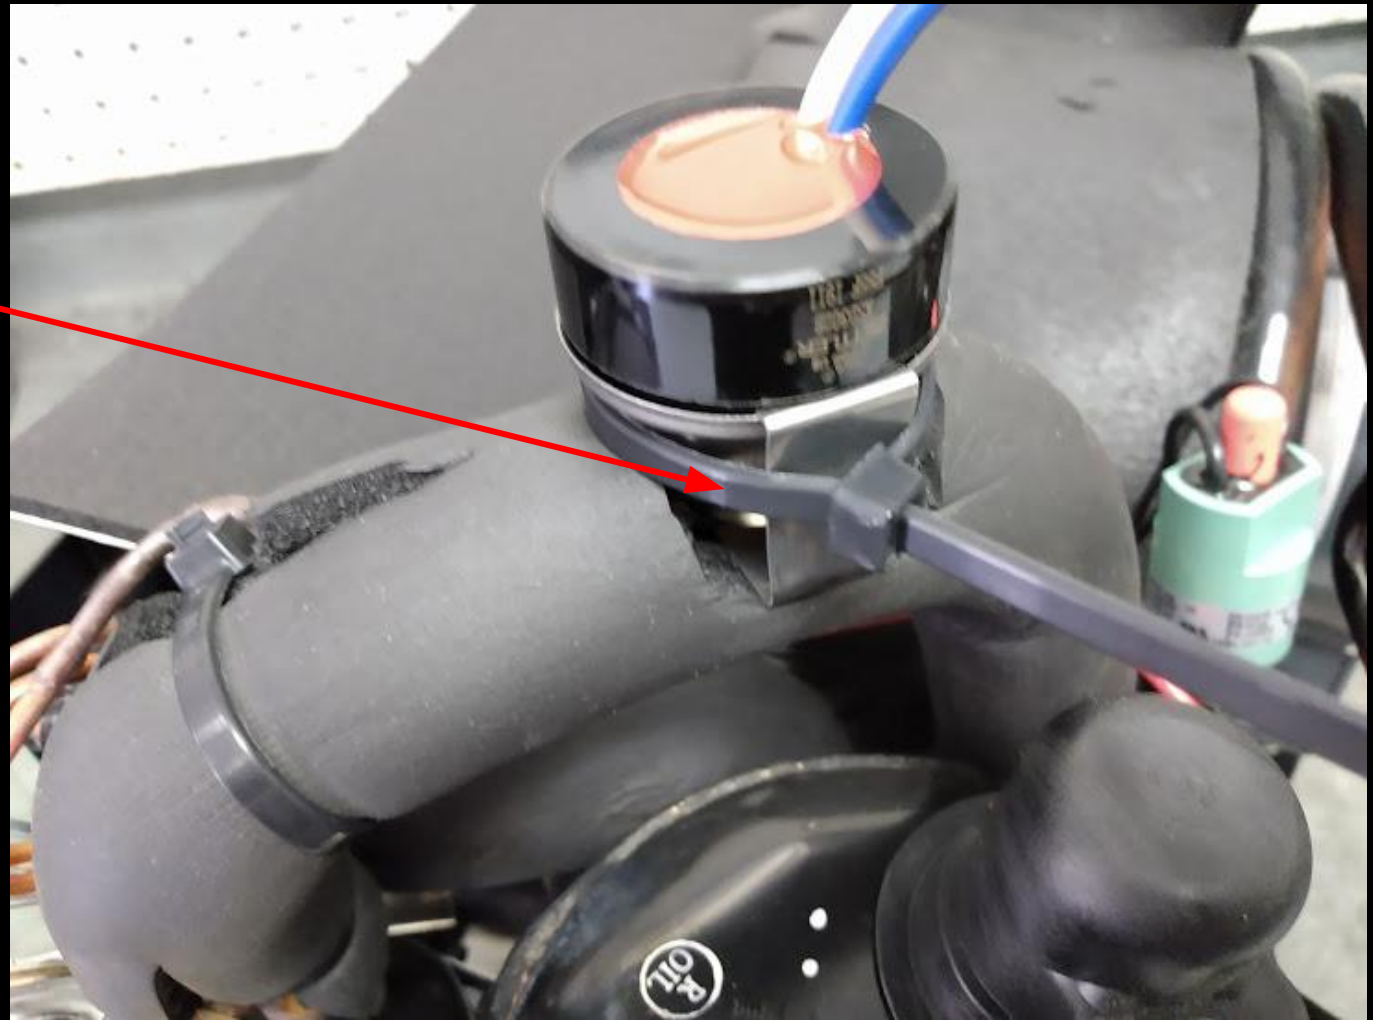


STEP 6:

Trim off the excess part of the tie strap.

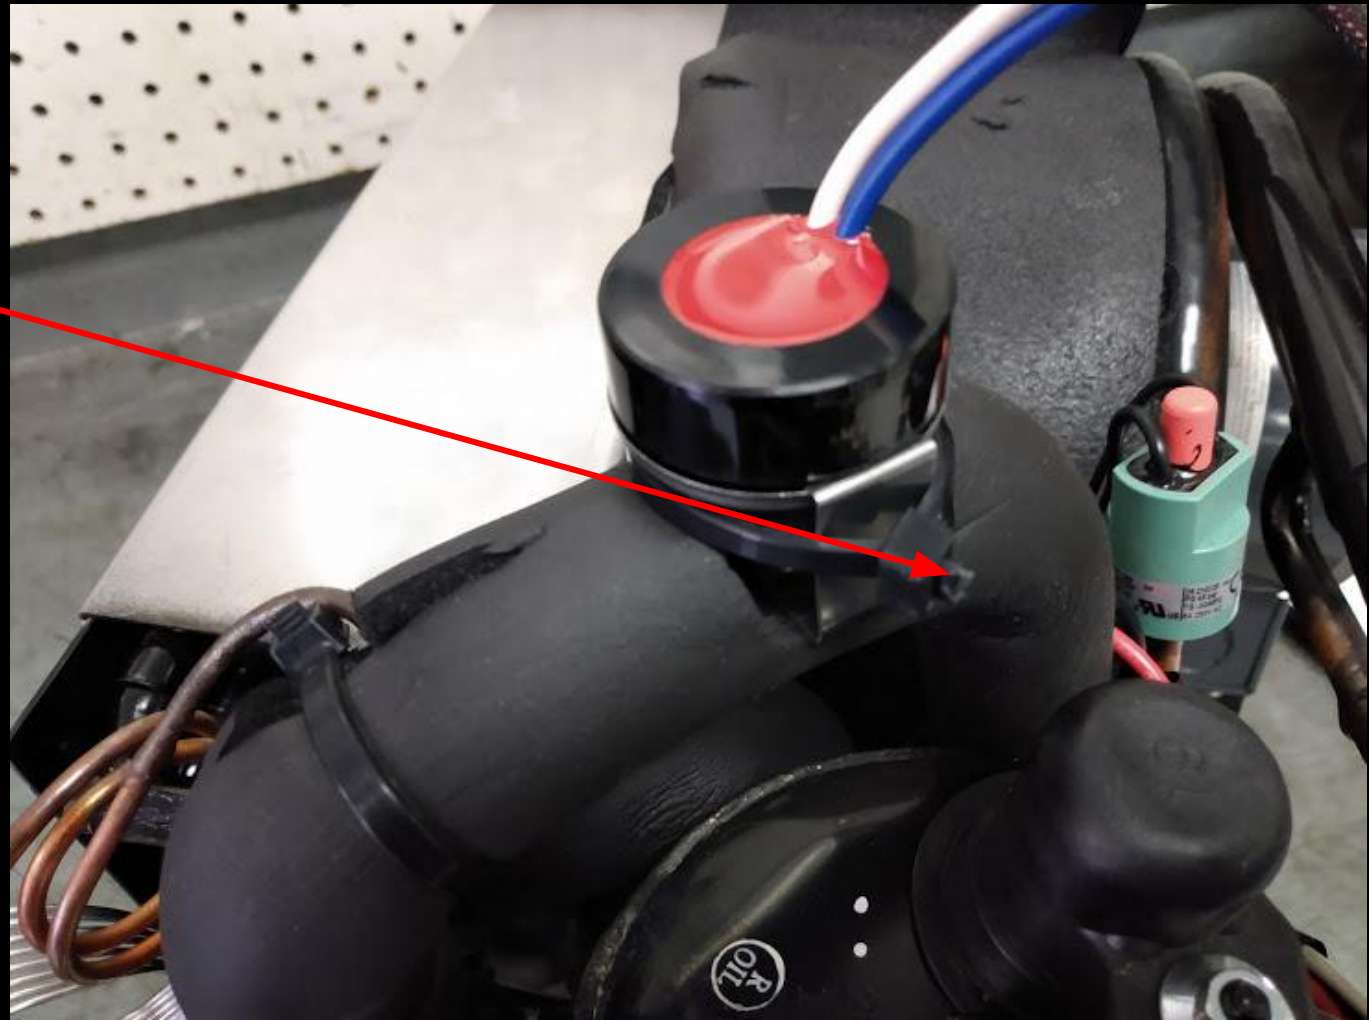

STEP 7:

Wrap the defroster with the foam tape.

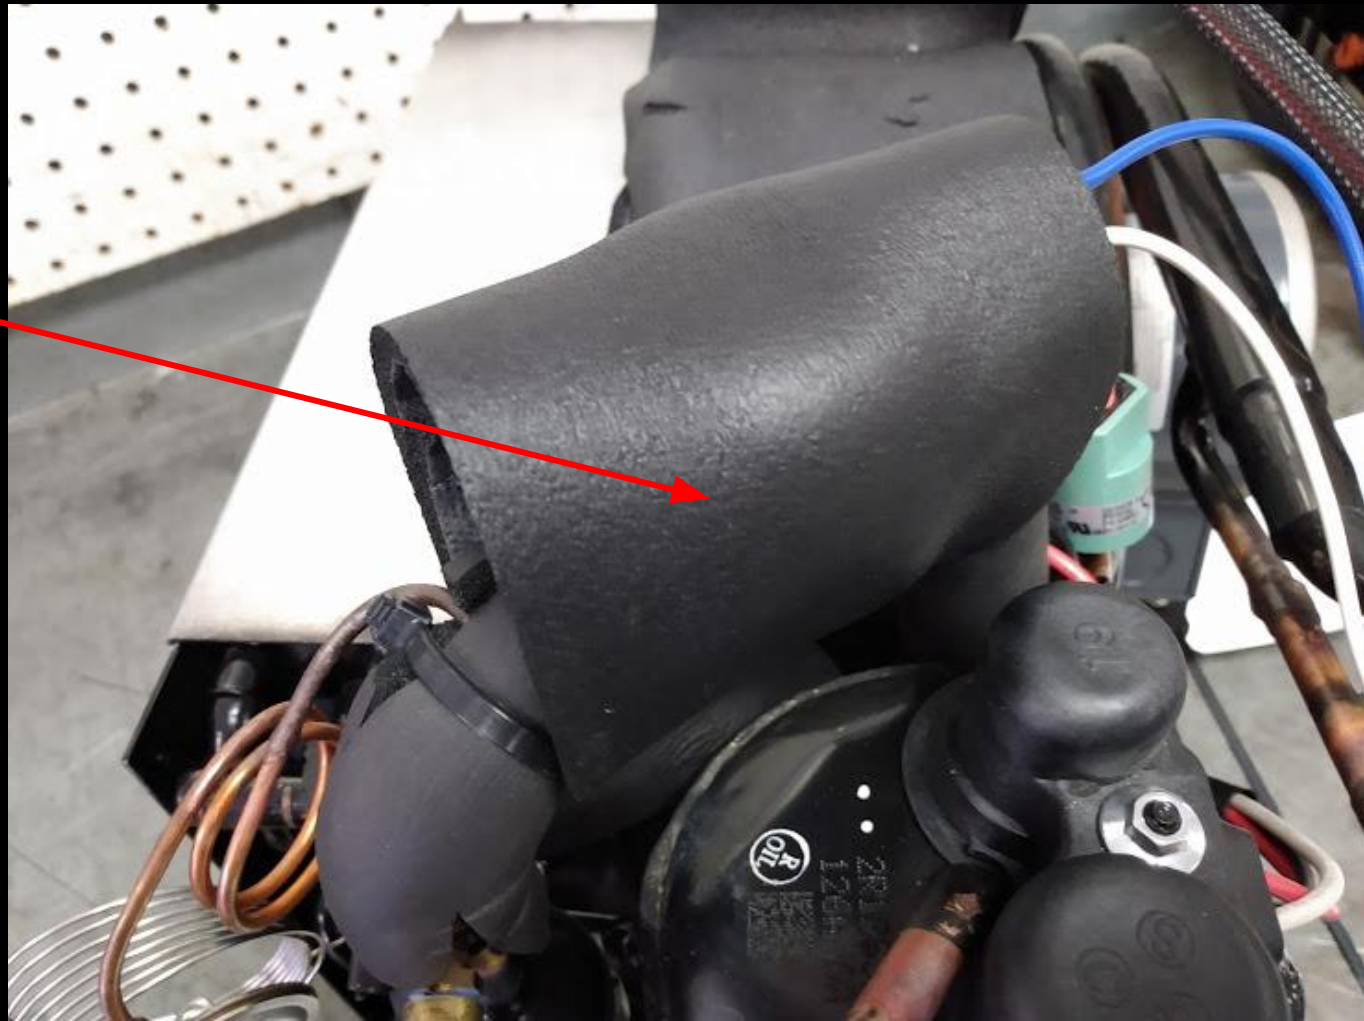

STEP 8:

Locate the black wire coming out from under the compressor cap.

Cut this wire and splice in the wires from the defroster (1 defrost wire to one cut wire, the other defrost wire to the other cut wire)

